



Switcher Panel



1. Press "ON" button to turn on Projector.
2. Press "PC" button for PC use with the projector.



3. Press "Doc Cam" button for use with the projector. See ELMO Doc Cam Instructions.
4. Press "Laptop" button for use with the projector. Connect laptop to HDMI cable in the cubby on podium.



4. Press "Aux Audio" button to use an audio device that is connected to the 1/8" audio cable in cubby on the podium.



5. Control room "Volume" with dial to set and adjust room audio.
6. The "AV Mute" button is for use when you want to black out the projector screen.



7. The "Screen Up & Down" button is for when there is a need to raise or lower the projector screen.



8. The "Off" button is to turn off the projector.
9. *Please remember to turn off projector, exit all programs, and to log out of PC.*

Need assistance? • Call H.E.L.P. or Ext. 4357 • Please report all problems!