Perkins MPR Podium Instructions





Pull down screen and power on the laptop at podium.



- 2. Use EPSON remote to <u>Power</u> on the projector.
- 3. Use EPSON remote to change HDMI input.




HDMI2* - Comcast Cable

*In upper right corner.





 4. Room Volume Control is on back wall opposite the podium.



Aux. Audio is available at the podium. Use 1/8 audio jack for laptop or audio device. Volume control with Switchcraft. Aux Audio in wall plate mic #3 too.

 


For Computer Audio only. Use

Aux. audio 1/8 jack

and set audio to Speaker/Headphones on laptop.







8. The MPR telephone is in the hallway across from entrance.



Need assistance? ■ Call H.E.L.P. or Ext. 4357 ■ Please report all problems!